

Wireless Surveillance Detector

User Guide

This product is for all people, no special skill or knowledge pre-requisite.

User guide:

1. Lightly press and open the cover of cell container, then load 2 AAA batteries into it as the marked direction.
2. Draw out the antenna, put the switch at alarm mode and adjust sensitivity to High grade.
3. Hold the detector and close it up to anywhere you suspect to be spied.
4. If there is any hidden camera or other RF bug, the indicator light will be on (nearer to the camera or bug, more light to be on), and the alarm will be triggered.
5. Then you need adjust the sensitivity button gradually to LOW grade, and slowly come near to the hidden camera to find it out.

Note:

1. After turn on the kit, if the bottom red light is on, it means that power is not full enough, please re-load new battery.
2. After turn on the kit, if Alarms always sound or several green light is on at any place, it means that there are many interferential wireless wave around it .so please adjust the sensitivity tuner lower and lower till no green light is on or just one green light on, then it is ready for detecting.
3. Light indication, the green lights will be on from blow to above when the wireless frequency detected by this device is more and more stronger, it means that this device is become more and more closer to the wireless source.
4. Audio instruction, if the sound of alarm is faster and faster, that this device is become more and closer to the wireless source.

Vibration detecting Model:

When the switch button is put to the up it will be at Vibration detecting model.

Silent detecting Model:

Plug an earphone into the earphone jack you could let it be silent detecting status.


How to differentiate wireless camera, bug and mobile phone:

The frequency of wireless camera or bug is incessantly so the green indicator light is also incessantly on. The frequency of mobile phone is of discontinuously so the indicator light will be on also discontinuously.

Possible place to be assembled with cameras, bug or other wireless surveillance equipment:

Perfume sprayer, light, ceiling, mirror, blowhole, air-condition, cigarette case, bag etc.

5. Detection distance is about max 10m. (It depends on the style and the power of the camera).
6. When it's not used for a long time, please take out battery in case electricity is leaked out.

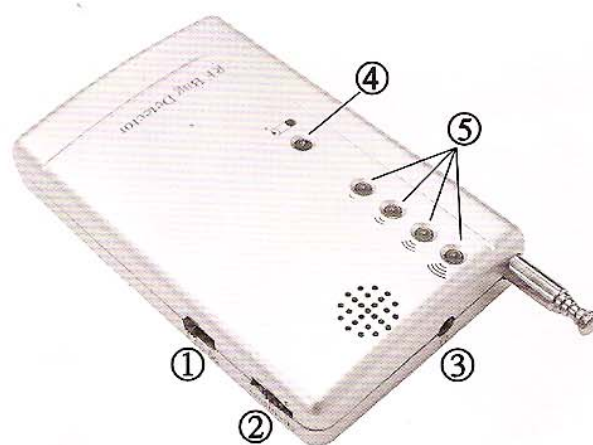

- ① **Switch :OFF/ alarm /vibration**
- ② **Sensitive tuner : low high**
- ③ **Earphone jack**
- ④ **Faint power indicator**
- ⑤ **Beacon**