




Inductive Bluetooth Neckloop

SEA07 bluetooth neckloop is applicable to works with all kinds of electrical invisible earpieces. Including SEH05/08/30/40.

Each set of SEA07 neckloop including below parts:


- 1 x bluetooth neckloop
- 1 x USB AC power adaptor
- 1 x USB charge cable
- 1 x Black color EVA bag



Adaptor



USB Cable

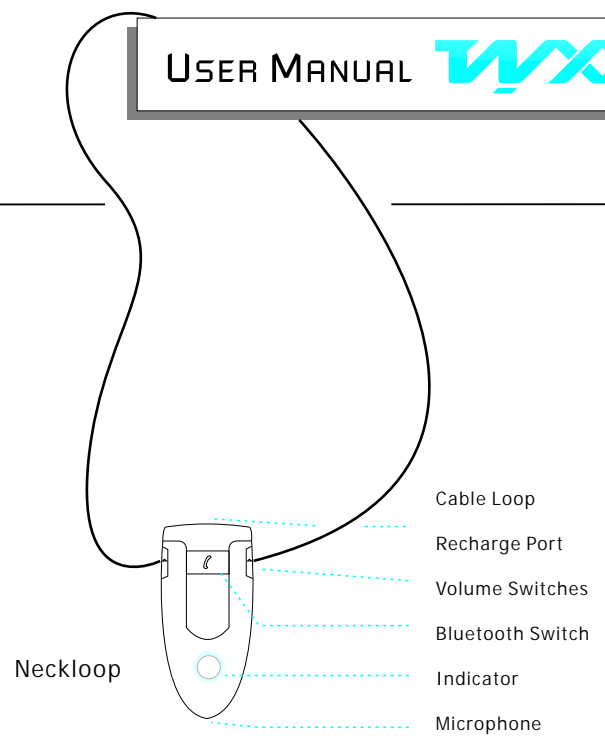


Quick Start

Step 1 > Recharge battery about 2 hours

Please refer to right pictures to recharge
Indicator turn on blue light while charging
After full charged indicator will turn off

Note: Bluetooth is not function while charge battery
Full charge needs about 2 horus

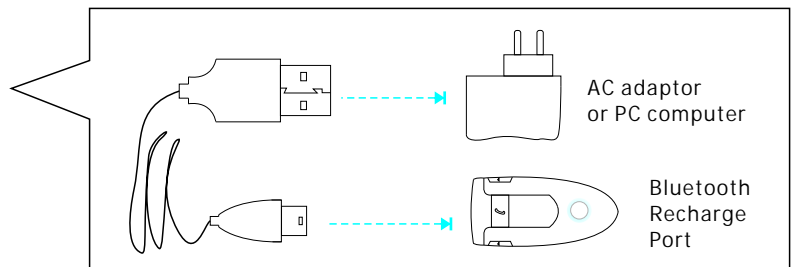

Step 2 > Pair bluetooth with cell phone

A. Put bluetooth in pair mood

- I. With the bluetooth neckloop is power off, press and hold bluetooth switch for 6-10 seconds until indicator turn on and stay in blue.
- II. If bluetooth neckloop is power on or indicator flash, turn off bluetooth then repeat above step.


B. Pair bluetooth in cellphone

- I. Go to bluetooth panel in cellphone turn on bluetooth function and search for new devices
 - II. Select "H500" or "Motorola H500" then press "OK" or "YES"
 - III. Enter pass word "0000" and press "OK".
- After successfully paired indicator will change from stay to flash

Note: Cellphone's bluetooth feature is off by default.
Please refer to phone's user guide to turn on bluetooth feature.

Step 3 > Test and use

Wear neckloop as right picture showing
Load battery into earpiece and wear earpiece in ear canal
On your cell phone dial the number you want to call
You will hear voice in earpiece after connected

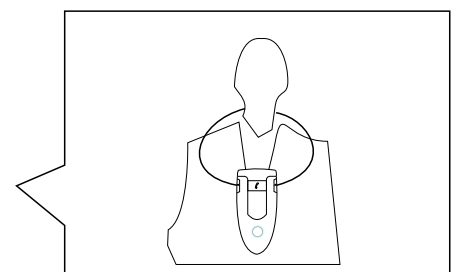

Step 4 > Turn off/on bluetooth neckloop

For save battery power, please turn off bluetooth neckloop if do not use for long time

Turn off – Press and hold bluetooth switch until indicator flash rapidly then turn off
Turn on – Press and hold bluetooth switch until indicator flashes.

Note: To use bluetooth neckloop again please turn on bluetooth feature in cellphone and turn on bluetooth neckloop.
If cellphone do not connect automatically, please repeat step 2 and pair again.





Inductive Bluetooth Neckloop

Troubleshooting

Q. Why my cell phone can not find bluetooth neckloop?

A. Make sure bluetooth neckloop is in pairing mode. The indicator stdy blue if in pairing mode.

Q. My neckloop work before but not is stop working.

A. Make sure bluetooth neckloop connected with cell phone and cell phone is on.

If cell phone have not problem, please turn off bluetooth neckloop and pair again.

If bluetooth neckloop work a few seconds then disconnect connections, please turn off bluetooth and recharge battery.

Operations

Make a voice dial call	Tap bluetooth switch and speak name after the tone
End a call	Tap bluetooth switch
Receive a call	Tap bluetooth switch
Reject a call	Press and hold bluetooth switch until heard a beep
Redial last call	Press and hold bluetooth switch until heard a beep
Answer a second incoming call	Press and hold bluetooth switch (first call on hold)
Toggle between two active calls	Press and hold bluetooth switch
Join a 3-way call (feature is phone dependent)	Press and hold both volume switches
Put an active call on hold or resume a call on hold	Press and hold bluetooth switch until hear a beep
Transfer a call from the phone to bluetooth	Tap the bluetooth switch
Disable or enable the indicator light	Press and hold bluetooth switch for 3-4 seconds
Mute or unmute a call	Tap both volume switches

Indicators

Steady on while plug into power adaptor	Charging battery
Off with adaptor plug in	Charging completed
Off without adaptor	Power use off
On Steady without adaptor	In pairing mode
10 rapid flahes	Pairing successful
Slow pluse	Connected
Quick flash	Standy

Warranty

Neckloop with one year warranty since ship date

Warranty excluding below conditions:

- 1 > Wrong operation cause device stop work
- 2 > Device get in water and circuit broken
- 3 > Open bluetooth case
- 4 > Cut cable loop
- 5 > Passed one year since original ship date

